

ساعیان ارتباط

یکپارچگی و امنیت در ارتباط

**Akuvox** Smart Intercom



## R29 Series Door Phone User Manual



## About This Manual

Thank you for choosing Akuvox's R29S/F door phone. This manual is intended for end users, who need to properly configure the door phone. It provides all functions and configuration of R29S/F, the information detailed in this user manual applicable to firmware version 29.1.1.116.zip or lower version.

- Please verify the packaging content and network status before setting.
- The old firmware may be a little different from 29.1.1.116.zip about some configuration. Please consult your administrator for more information.

## Contact Us

For more information about the product, please visit us at [www.akuvox.com](http://www.akuvox.com) or feel free to contact us by

Sales email: [sales@akuvox.com](mailto:sales@akuvox.com)

Technical support email: [techsupport@akuvox.com](mailto:techsupport@akuvox.com)

Telephone: +86-592-2133061 ext.7694/8162

**We highly appreciate your feedback about our products.**



Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions : (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note : This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Specific Absorption Rate (SAR) information

SAR tests are conducted using standard operating positions accepted by the FCC with the device transmitting at its highest certified power level



## ساعات ارتباط

یکپارچه‌سازی و امنیت در ارتباط

in all tested frequency bands, although the SAR is determined at the highest certified power level, the actual SAR level of the device while operating can be well below the maximum value. Before a new product is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the exposure limit established by the FCC, tests for each phone are performed in positions and locations as required by the FCC.

For headset, this part has been tested and meets the FCC RF exposure guidelines when used with an accessory designated for this product or when used with an accessory that contains no metal.

For baseband, this equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

# Content

<b>1. Product overview</b> .....	1
1.1. Product Description.....	1
1.2. Power Connection.....	2
<b>2. Daily Use</b> .....	3
2.1. Making a Call.....	3
2.1.1. Calling From Digital Keypad.....	3
2.1.2. Calling From Phonebook.....	3
2.2. Receiving a Call.....	4
2.3. Gaining Access.....	4
2.3.1. Public Key.....	4
2.3.2. Private Key.....	5
2.3.3. RF (Radio-Frequency) Card.....	5
2.3.4. Answer Unit.....	5
2.4. Monitoring.....	6
<b>3. Configuration</b> .....	6
3.1. How to Access System Settings.....	6
3.2. Basic Settings.....	7
3.2.1. Time.....	7



## ساعیان ارتباط

یپراجکتی و امنیت در ارتباط

3.2.2. Volume.....	7
3.2.3. Await.....	8
3.2.4. Language.....	9
3.2.5. LED.....	9
3.3. Advanced Settings.....	9
3.3.1. Address.....	9
3.3.2. Password.....	10
3.3.3. Contact.....	10
3.3.4. LockPasswd.....	11
3.3.5. AntiAlarm.....	11
3.3.6. RFCard (Radio Frequency Card).....	12
3.3.7. RTSP (Real Time Streaming Protocol) Server.....	12
3.3.8. Motion.....	12


# 1. Product overview

## 1.1. Product Description

29S is an Android-based IP video door phone with a touch screen. It incorporates audio and video communications, access control and video surveillance.

Its finely-tuned Android OS allows for feature customization to better suit the habit of usage of local people. Powered by it, R29S's multiple ports, such as RS485 and Wiegand ports, can be used to easily integrate external digital systems, such as elevator controller and fire alarm detector, helping to create a holistic control of building entrance and its surroundings and giving occupants a great sense of security.

It is applicable to multi-storey residential buildings, high-rise office buildings and their complexes.

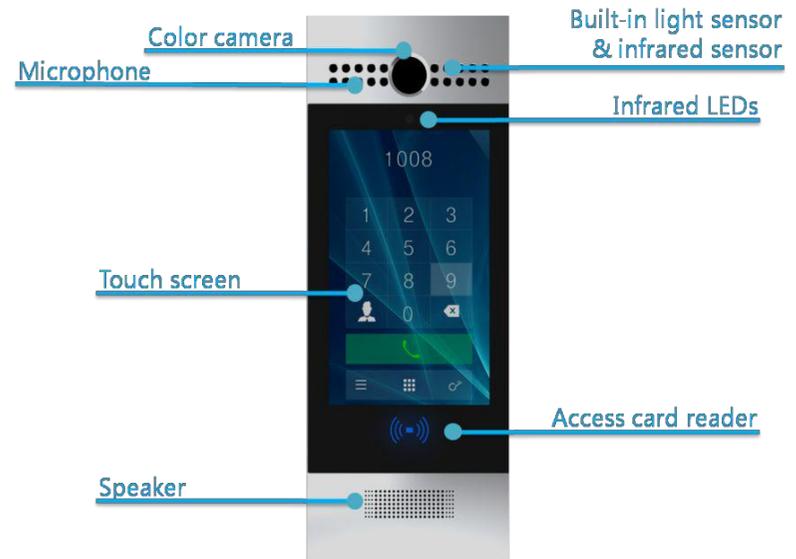


## 1.2. Power Connection

The door phone is powered by simply connecting the two wires of the power adapter to the wiring interface on the back of the door phone.

① Plug the wire printed with white bars to ② the first pin and slightly press it so that it gets locked inside.

③ Plug the wire printed with letters to ④ the second pin and slightly press it so that it gets locked inside.

Note: 12V/1A DC from LPS (power line  $\leq 3m$ ) or 48V/0.25A PoE

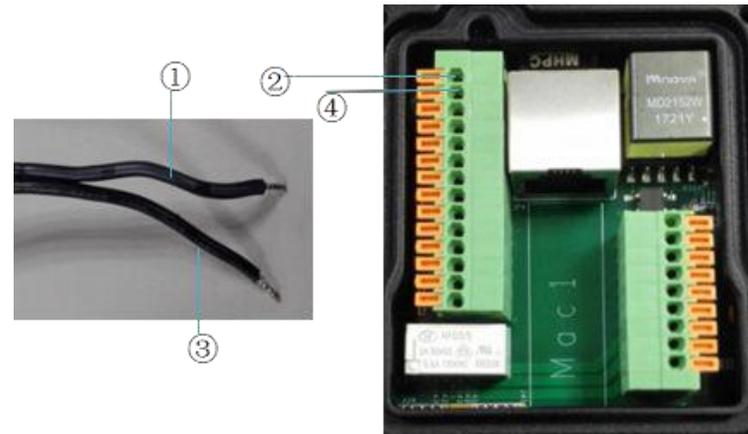

## 2. Daily Use

### 2.1. Making a Call

There are two ways to make a call from the door phone to monitor units, which can be an indoor monitor or an intercom app.

#### 2.1.1. Calling From Digital Keypad

- ① The default interface of the door phone is the dial interface.
- ② Enter the number to call on the digital keypad, for example room number 1022, and ③ tap the dial icon.

#### 2.1.2. Calling From Phonebook

- ④ Tap the icon to enter the phonebook
- To find a specific occupant, ⑤ scroll up or down the pre-imported contact list, which is either a room number, an





### 2.3.2. Private Key

Private key is an exclusive 8-digit password for each occupant in a building, which could be set with the help of the door phone administrator.


Same as the public key, ①enter the private key on the digital keypad and ②tap the unlock icon to open door.

### 2.3.3. RF (Radio-Frequency) Card

R29S is compatible with both 13.56MHz and 125KHz RF cards. ③Place the card near the reader and you will hear “The door is now opened.”

### 2.3.4. Answer Unit

During the call between the answer unit and the door phone, the occupant tap the unlock key on the monitor unit to grant access.

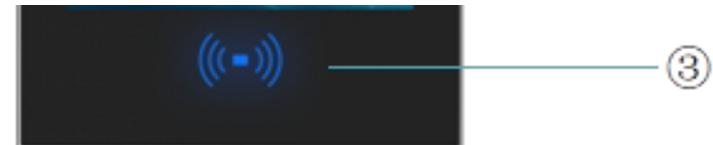

## 2.4. Monitoring

The video footage from the door phone camera can be viewed by monitor units in real time.


The URL format is:

rtsp://<ip\_host>/live/ch00\_0

## 3. Configuration

### 3.1. How to Access System Settings

- ① In the dial interface, ② input 9999, then ③ press dial key.
- ④ Input 3888 in the pop-up setting screen and ⑤ tap OK to enter the set-up interface.

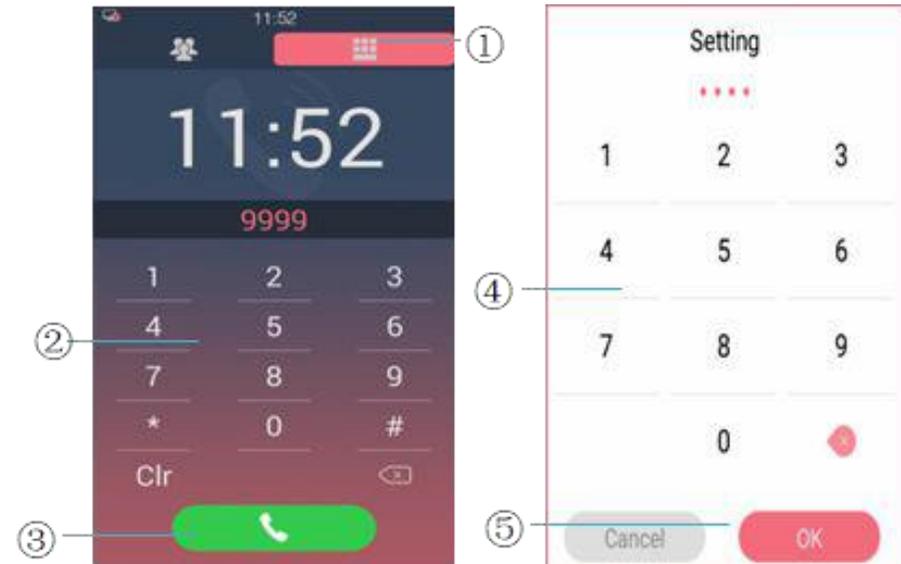

## 3.2. Basic Settings

### 3.2.1. Time

- ① Choose automatic date& time” setting for automatic access of time, date and time zone.
- ② Or set the time, date and time zone manually.

### 3.2.2. Volume

Drag the dot to adjust three types of volume, i.e. call volume, advertisement volume and key volume.




### 3.2.3. Await

Tap Await icon to set the standby mode, standby time and unlock mode.

③ There are three options for the standby mode. NO is for the door phone's default dial interface to remain permanently on; Blank Screen is a black screen during standby; and Picture is a chosen screensaver of your like, which can be imported in bulk by the administrator.

④ You can set the standby time between 30 Sec to 180 Sec.

⑤ Unlock mode is to choose how to wake up the door phone from the standby mode.

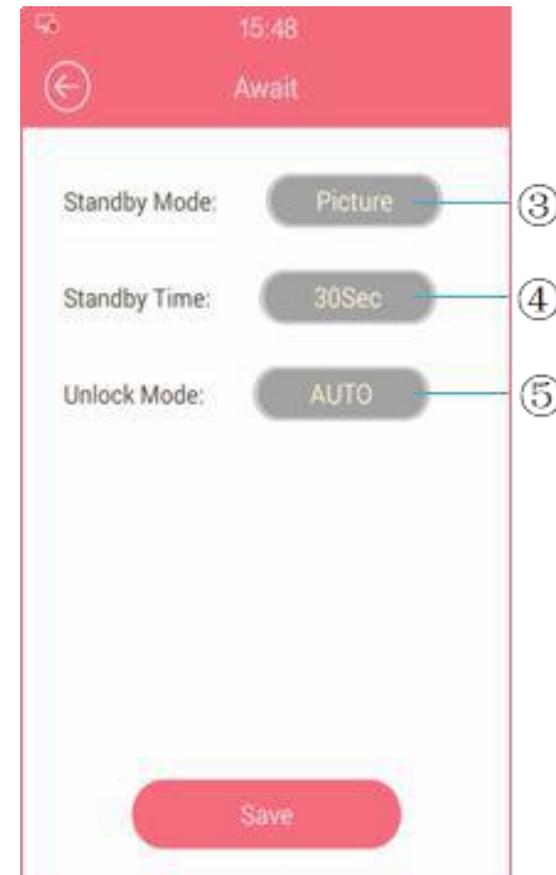

### 3.2.4. Language

Tap language icon to select system language. More languages can be added by the administrator.

### 3.2.5. LED

By setting the LED parameter, the door phone will adjust its screen backlight according to the lighting conditions of the environment.


## 3.3. Advanced Settings

### 3.3.1. Address

Tap Address icon to configure the IP address.

① Choose DHCP for the door phone to access the network parameter automatically.

② Or input the parameter manually.

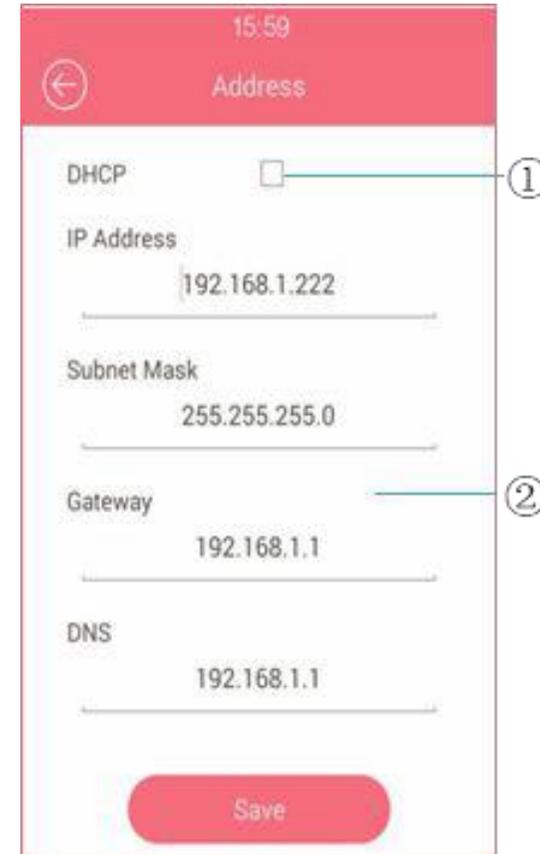


### 3.3.2. Password

- ③ In the Project Passwd menu, reset the password for accessing the system setting, which is 9999 by default.
- ④ In the Public Key Passwd menu, reset the public key password, which is 33333333 by default.

### 3.3.3. Contact

Add details of new occupants, including name, phone number and photo or edit existing contact details.  
You can also create contact groups first and then add contacts to the groups.

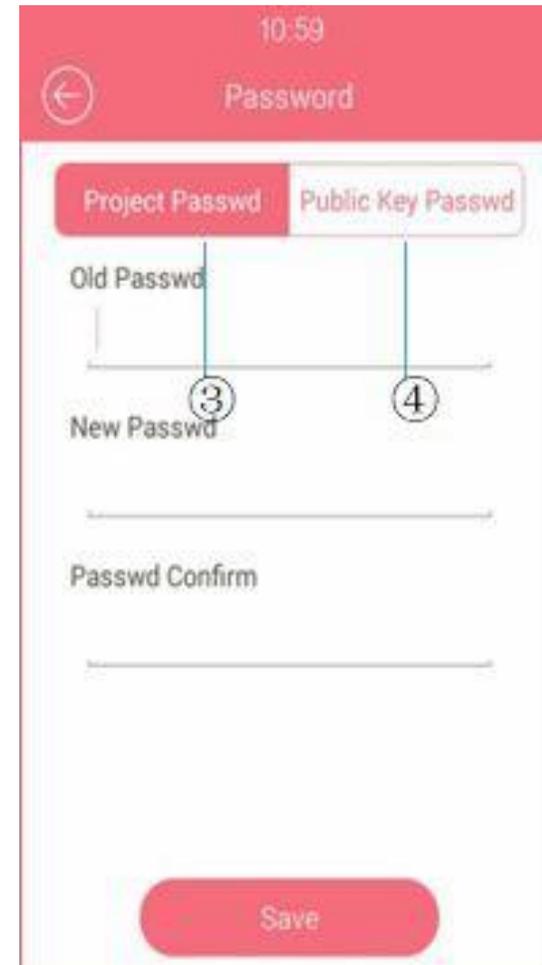

10:59  
Password

Project Passwd Public Key Passwd

Old Passwd

New Passwd

Passwd Confirm


Save

### 3.3.4. LockPasswd

- ① Add new private keys or edit existing private keys.
- ② The private key can also be configured with a date and time to offer limited access.

### 3.3.5. AntiAlarm

By turning on the Tamper Proof Switch in the AntiAlarm menu, alarm will be triggered and a notification message will be sent to monitor units when there is any malicious attempt to damage the door phone.

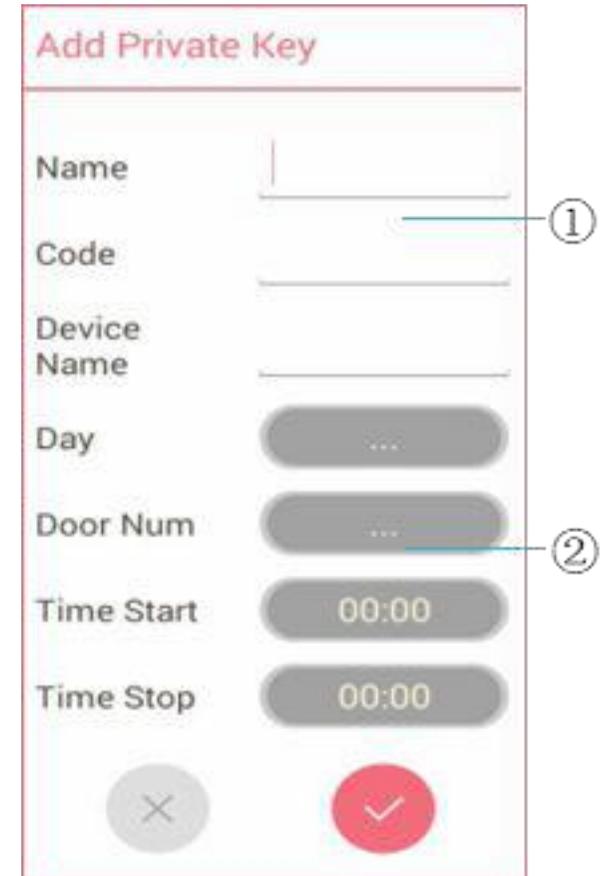

### 3.3.6. RfCard (Radio Frequency Card)

- ③ Add new access cards or delete registered cards.
- ④ Administrator can also add a valid date and time to the card to offer limited access.

### 3.3.7. RTSP (Real Time Streaming Protocol) Server

By enabling the RTSP Server, occupants can view the real-time video footage of the door phone camera from a monitor unit.

### 3.3.8. Motion

By enabling the motion detection function, the door phone will detect and record any change in the surrounding, such as suspicious people loitering around, and send notification message to a monitor unit.

